


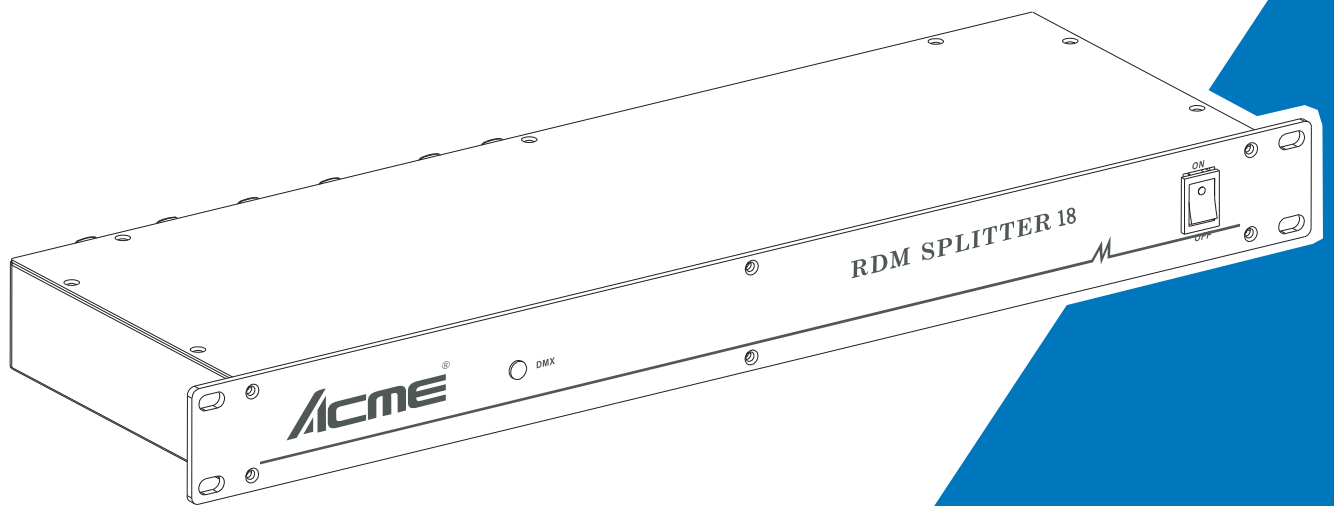

RDM SPLITTER 18



User Manual

Please read the instruction carefully before use

CONTENTS

01/ Safety Information.....	2
02/ Technical Specifications	3
03/ Overview.....	4
04/ System Connection	4
05/ Fixture Cleaning.....	5

01/ Safety Information



Please read the instruction carefully which includes important information about the installation, usage and maintenance.

WARNING

Please keep this User Manual for future consultation. If you sell the unit to another user, be sure that they also receive this instruction manual.

Important:


Damages caused by the disregard of this user manual are not subject to warranty. The dealer will not accept liability for any resulting defects or problems.

- Unpack and check carefully to ensure that there is no transportation damage before using the unit.
- This product is for indoor use only. Use only in a dry location.
- DO install and operate by qualified operator.
- DO NOT allow children to operate the fixture.
- Be sure that no ventilation slots is blocked, otherwise the unit will be overheated.
- Before operation, ensure that you are connecting this product to the proper voltage in accordance with the specifications in this manual or on the product's specification label.
- It's important to ground the yellow/green conductor to earth in order to avoid electric shock.
- Minimum ambient temperature TA: 0°C. Maximum ambient temperature TA: 40°C. Do not operate this product at a lower or higher temperature.
- Keep flammable materials away from the fixture while operating to avoid fire hazard.
- Make sure the power cord is not crimped or damaged; replace it immediately if damaged.
- Avoid any flammable liquids, water or metal from entering the unit. Once it happens, cut off the mains power immediately.
- DO NOT operate in a dirty or dusty environment. DO clean the fixture regularly.
- DO NOT touch any wire during operation as there might be a hazard of electric shock.
- Avoid entanglement of the power cord with other wires.
- In the event of serious operating problem, stop using the unit immediately.
- Never turn on and off the unit time after time.
- DO NOT open the housing as there are no user serviceable parts inside.

- DO NOT attempt to operate this unit if it becomes damaged. DO NOT attempt any repairs yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center if needed.
- Disconnect this product from its power source before servicing.
- DO use the original packaging if the device is to be transported.
- DO NOT operate this product if you see damage on the housing, shields, or cables. Have the damaged parts replaced by an authorized technician at once.


02/ Technical Specifications

AC Power	100-240Vac; 50/60Hz	
Max. Power Consumption	5W	
Control and Programming	Protocols	DMX512 RDM
	Firmware Update	via DMX
Construction	DMX and RDM Data In/Out	3-pin XLR (optional with 5-pin XLR) RJ45 Connectors in/out
	Power In/Out	Power Connector in IEC Connector in
	Protection Rating	IP20
Features	1 x DMX/RDM inputs/outputs + 8 x DMX/RDM outputs, all inputs/outputs are opto-isolated with withstanding voltage 2000V	
	LED indicators show the status of DMX ports	
	Can be used as DMX/RDM splitter/amplifier	
Dimensions	482x153x44mm	19"x6"x1.7"
Weight	1.9 kg	4.2 lbs

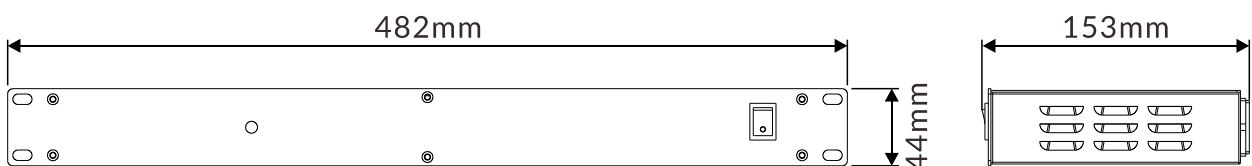


03/ Overview


Front View:

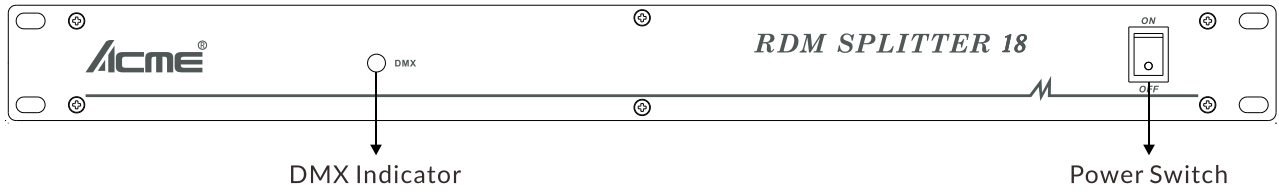

Rear View:

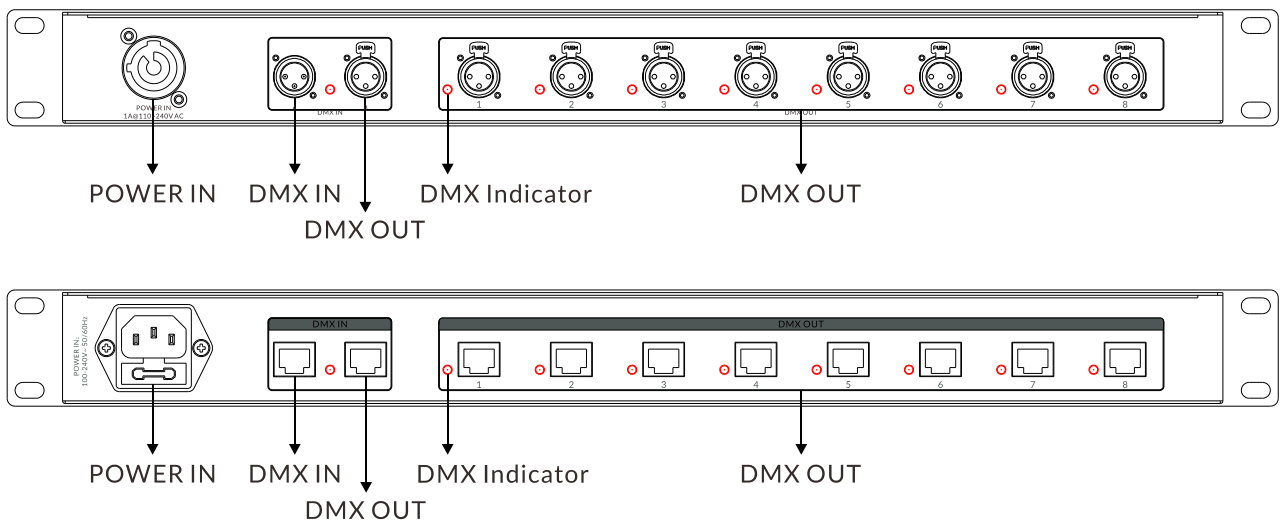

04/ System Connection

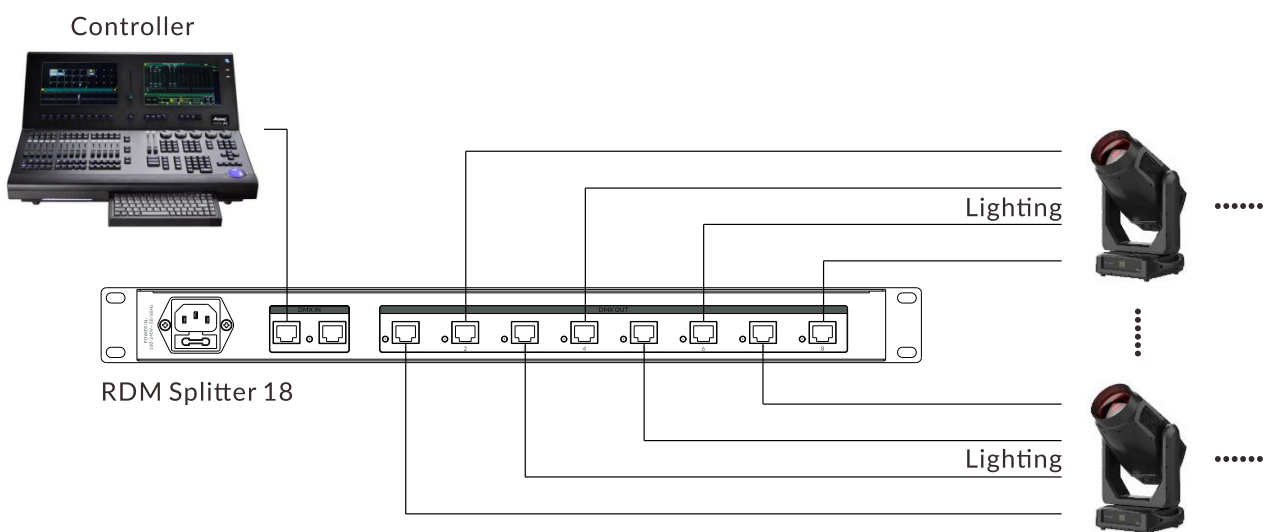

05/ Fixture Cleaning

It is absolutely essential that the fixture is kept clean. The fixture must be cleaned regularly to avoid dust, dirt and smoke-fluid residues building up on or within the fixture. The cleaning frequency depends on the application environment. Clean the fixture immediately if the dust enters it to avoid damage due to excessive dust.

- ▶ A soft lint-free cloth moistened with any good glass cleaning fluid is recommended, under no circumstances should solvents be used.
- ▶ Always dry the parts carefully.



www.acmelighting.com